

SHURE®

PSM®1000



Personal Monitor Wireless System

Guide de l'utilisation du système de retour personnel

Personal Monitor System Bedienungsanleitung

Guía del usuario del sistema de monitoreo personal

Guida all'uso del sistema di monitoraggio personale

Manual do Usuário do Sistema de Monitoração Pessoal

Система личного монитора беспроводочная



CE

IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12.  USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING: Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel. The safety certifications do not apply when the operating voltage is changed from the factory setting.

! WICHTIGE SICHERHEITSHINWEISE !

1. Diese Hinweise LESEN.
2. Diese Hinweise AUFHEBEN.
3. Alle Warnhinweise BEACHTEN.
4. Alle Anweisungen BEFOLGEN.
5. Dieses Gerät NICHT in der Nähe von Wasser verwenden.
6. NUR mit einem sauberem Tuch REINIGEN.
7. KEINE Lüftungsöffnungen verdecken. Gemäß den Anweisungen des Herstellers einbauen.
8. Nicht in der Nähe von Wärmequellen, wie Heizkörpern, Raumheizungen, Herden oder anderen Geräten (einschließlich Verstärkern) installieren, die Wärme erzeugen.
9. Die Schutzfunktion des Schukosteckers NICHT umgehen. Bei Steckern für die USA gibt es polarisierte Stecker, bei denen ein Leiter breiter als der andere ist; US-Stecker mit Erdung verfügen über einen dritten Schutzleiter. Bei diesen Steckerausführungen dient der breitere Leiter bzw. der Schutzleiter Ihrer Sicherheit. Wenn der mitgelieferte Stecker nicht in die Steckdose passt, einen Elektriker mit dem Austauschen der veralteten Steckdose beauftragen.
10. VERHINDERN, dass das Netzkabel gequetscht oder darauf getreten wird, insbesondere im Bereich der Stecker, Netzsteckdosen und an der Austrittsstelle vom Gerät.
11. NUR das vom Hersteller angegebene Zubehör und entsprechende Zusatzeräge verwenden.
12. NUR in Verbindung mit einem vom Hersteller angegebenen oder mit dem Gerät verkauften Transportwagen, Stand, Stativ, Träger oder Tisch verwenden. Wenn ein Transportwagen verwendet wird, beim Verschieben der Transportwagen-Geräte Einheit vorsichtig vorgehen, um Verletzungen durch Umkippen zu verhüten.



Dieses Symbol zeigt an, dass gefährliche Spannungswerte, die ein Stromschlagrisiko darstellen, innerhalb dieses Geräts auftreten.



Dieses Symbol zeigt an, dass das diesem Gerät beiliegende Handbuch wichtige Betriebs- und Wartungsanweisungen enthält.

ACHTUNG: Die in diesem Gerät auftretenden Spannungen sind lebensgefährlich. Das Gerät enthält keine Teile, die vom Benutzer gewartet werden können. Alle Reparatur- und Wartungsarbeiten von qualifiziertem Kundendienstpersonal durchführen lassen. Die Sicherheitszulassungen gelten nicht mehr, wenn die Werkseinstellung der Betriebsspannung geändert wird.

! CONSIGNES DE SÉCURITÉ IMPORTANTES !

1. LIRE ces consignes.
2. CONSERVER ces consignes.
3. OBSERVER tous les avertissements.
4. SUIVRE toutes les consignes.
5. NE PAS utiliser cet appareil à proximité de l'eau.
6. NETTOYER UNIQUEMENT avec un chiffon sec.
7. NE PAS obstruer les ouvertures de ventilation. Installer en respectant les consignes du fabricant.
8. Ne pas installer à proximité d'une source de chaleur telle qu'un radiateur, une bouche de chaleur, un poêle ou d'autres appareils (dont les amplificateurs) produisant de la chaleur.
9. NE PAS détériorer la sécurité de la fiche polarisée ou de la fiche de terre. Une fiche polarisée comporte deux lames dont l'une est plus large que l'autre. Une fiche de terre comporte deux lames et une troisième broche de mise à la terre. La lame la plus large ou la troisième broche assure la sécurité de l'utilisateur. Si la fiche fournie ne s'adapte pas à la prise électrique, demander à un électricien de remplacer la prise hors normes.
10. PROTÉGER le cordon d'alimentation afin que personne ne marche dessus et que rien ne le pince, en particulier au niveau des fiches, des prises de courant et du point de sortie de l'appareil.
11. UTILISER UNIQUEMENT les accessoires spécifiés par le fabricant.



12. UTILISER uniquement avec un chariot, un pied, un trépied, un support ou une table spécifié par le fabricant ou vendu avec l'appareil. Si un chariot est utilisé, déplacer l'ensemble chariot-appareil avec précaution afin de ne pas le renverser, ce qui pourrait entraîner des blessures.

13. DÉBRANCHER l'appareil pendant les orages ou quand il ne sera pas utilisé pendant longtemps.
14. CONFIER toute réparation à du personnel qualifié. Des réparations sont nécessaires si l'appareil est endommagé de quelque façon que ce soit, comme par exemple : cordon ou prise d'alimentation endommagé, liquide renversé ou objet tombé à l'intérieur de l'appareil, exposition de l'appareil à la pluie ou à l'humidité, appareil qui ne marche pas normalement ou que l'on a fait tomber.
15. NE PAS exposer cet appareil aux égouttures et aux éclaboussements. NE PAS poser des objets contenant de l'eau, comme des vases, sur l'appareil.
16. La prise SECTEUR ou un adaptateur d'alimentation doit toujours rester prêt(e) à être utilisé(e).
17. Le bruit aérien de l'appareil ne dépasse pas 70 dB (A).
18. L'appareil de construction de CLASSE I doit être raccordé à une prise SECTEUR dotée d'une protection par mise à la terre.
19. Pour réduire les risques d'incendie ou de choc électrique, ne pas exposer cet appareil à la pluie ou à l'humidité.
20. Ne pas essayer de modifier ce produit. Une telle opération est susceptible d'entraîner des blessures ou la défaillance du produit.



Ce symbole indique la présence d'une tension dangereuse dans l'appareil constituant un risque de choc électrique.



Ce symbole indique que la documentation fournie avec l'appareil contient des instructions d'utilisation et d'entretien importantes.

AVERTISSEMENT : Les tensions à l'intérieur de cet équipement peuvent être mortelles. Aucune pièce interne réparable par l'utilisateur. Confier toute réparation à du personnel qualifié. Les certifications de sécurité sont invalidées lorsque le réglage de tension d'usine est changé.

!ISTRUZIONI IMPORTANTI PER LA SICUREZZA !

1. EGGETE queste istruzioni.
2. CONSERVATE queste istruzioni.
3. OSSERVATE tutte le avvertenze.
4. SEGUITE tutte le istruzioni.
5. NON usate questo apparecchio vicino all'acqua.
6. PULITE l'apparecchio SOLO con un panno asciutto.
7. NON ostruite alcuna apertura per l'aria di raffreddamento. Installate l'apparecchio seguendo le istruzioni del costruttore.
8. NON installate l'apparecchio accanto a fonti di calore quali radiatori, aperture per l'efflusso di aria calda, fornì o altri apparecchi (amplificatori inclusi) che generano calore.
9. NON modificate la spina polarizzata o con spinotto di protezione. Una spina polarizzata è dotata di due lame, una più ampia dell'altra. Una spina con spinotto è dotata di due lame e di un terzo polo di messa a terra. La lama più ampia ed il terzo polo hanno lo scopo di tutelare la vostra incolumità. Se la spina in dotazione non si adatta alla presa di corrente, rivolgetevi ad un elettricista per far eseguire le modifiche necessarie.
10. EVITATE di calpestare il cavo di alimentazione o di comprimerlo, specie in corrispondenza di spine, prese di corrente e punto di uscita dall'apparecchio.
11. USATE ESCLUSIVAMENTE i dispositivi di collegamento e gli accessori specificati dal costruttore.



12. USATE l'apparecchio solo con carrelli, sostegni, treppiedi, staffe o tavoli specificati dal costruttore o venduti insieme all'apparecchio stesso. Se usate un carrello, fate attenzione durante gli spostamenti per evitare infortuni causati da un eventuale ribaltamento del carrello stesso.

13. SCOLLEGATE l'apparecchio dalla presa di corrente in caso di temporali o di non utilizzo per un lungo periodo.
14. RIVOLGETEVI a personale di assistenza qualificato per qualsiasi intervento. È necessario intervenire sull'apparecchio ogniqualvolta sia stato danneggiato, in qualsiasi modo, ad esempio in caso di danneggiamento di spina o cavo di alimentazione, versamento di liquido sull'apparecchio o caduta di oggetti su di esso, esposizione dell'apparecchio a pioggia o umidità, funzionamento irregolare o caduta.
15. NON esponetelo a sgocciolamenti o spruzzi. NON appoggiate sull'apparecchio oggetti pieni di liquidi, ad esempio vasi da fiori.
16. NON esponetelo a sgocciolamenti o spruzzi. NON appoggiate sull'apparecchio oggetti pieni di liquidi, ad esempio vasi da fiori.
17. La spina di alimentazione o un attacco per elettrodomestici devono essere sempre pronti per l'uso.
18. Il rumore aereo dell'apparecchio non supera i 70dB (A).
19. Per ridurre il rischio di incendio o folgorazione, non esponete questo apparecchio alla pioggia o all'umidità.
20. Non tentate di modificare il prodotto. Tale operazione può causare infortuni e/o il guasto del prodotto stesso.



Questo simbolo indica la presenza di alta tensione all'interno dell'apparecchio, che comporta il rischio di folgorazione.



Questo simbolo indica la presenza di istruzioni importanti per l'uso e la manutenzione nella documentazione in dotazione all'apparecchio.

AVVERTENZA : le tensioni all'interno di questo apparecchio possono essere letali. L'apparecchio non contiene parti che possono essere riparate dall'utente. Per qualsiasi intervento, rivolgetevi a personale di assistenza qualificato. Le certificazioni di sicurezza non sono valide se si cambia la tensione di funzionamento rispetto al valore prefissato in fabbrica.

! INSTRUCCIONES IMPORTANTES DE SEGURIDAD !

1. LEA estas instrucciones.
 2. CONSERVE estas instrucciones.
 3. PRESTE ATENCIÓN a todas las advertencias.
 4. SIGA todas las instrucciones.
 5. NO utilice este aparato cerca del agua.
 6. LIMPIESE UNICAMENTE con un trapo seco.
 7. NO obstruya ninguna de las aberturas de ventilación. Instálese según lo indicado en las instrucciones del fabricante.
 8. No instale el aparato cerca de fuentes de calor tales como radiadores, registros de calefacción, estufas u otros aparatos (incluyendo amplificadores) que produzcan calor.
 9. NO anule la función de seguridad del enchufe polarizado o con clavija de puesta a tierra. Un enchufe polarizado tiene dos patas, una más ancha que la otra. Un enchufe con puesta a tierra tiene dos patas y una tercera clavija con puesta a tierra. La pata más ancha o la tercera clavija se proporciona para su seguridad. Si el tomacorriente no es del tipo apropiado para el enchufe, consulte a un electricista para que sustituya el tomacorriente de estilo anticuado.
 10. PROTEJA el cable eléctrico para evitar que personas lo pisen o estrujen, particularmente en sus enchufes, en los tomacorrientes y en el punto en el cual sale del aparato.
 11. UTILICE únicamente los accesorios especificados por el fabricante.
12. UTILICESE únicamente con un carro, pedestal, trípode, escuadra o mesa del tipo especificado por el fabricante o vendido con el aparato. Si se usa un carro, el mismo debe moverse con sumo cuidado para evitar que se vuelque con el aparato.
 13. DESENCHUFE el aparato durante las tormentas eléctricas, o si no va a ser utilizado por un lapso prolongado.
 14. TODA reparación debe ser llevada a cabo por técnicos calificados. El aparato requiere reparación si ha sufrido cualquier tipo de daño, incluyendo los daños al cordón o enchufe eléctrico, si se derrama líquido sobre el aparato o si caen objetos en su interior, si ha sido expuesto a la lluvia o la humedad, si no funciona de modo normal, o si se ha caído.
 15. NO exponga este aparato a chorros o salpicaduras de líquidos. NO coloque objetos llenos con líquido, tales como floreros, sobre el aparato.
 16. El enchufe de alimentación principal o acoplador de aparato electrodoméstico deberá permanecer en condiciones de funcionamiento.
 17. El nivel de ruido transmitido por el aire del aparato no excede de 70 dB (A).
 18. Los aparatos de fabricación CLASE I deberán conectarse a un tomacorriente DE ALIMENTACIÓN con clavija de puesta a tierra protectora.
 19. Para reducir el riesgo de causar un incendio o sacudidas eléctricas, no exponga este aparato a la lluvia ni a humedad.
 20. No intente modificar este producto. Hacerlo podría causar lesiones personales y/o la falla del producto.



Este símbolo indica que la unidad contiene niveles de voltaje peligrosos que representan un riesgo de choques eléctricos.



Este símbolo indica que la literatura que acompaña a esta unidad contiene instrucciones importantes de funcionamiento y mantenimiento.

ADVERTENCIA : Los voltajes presentes en este equipo representan un riesgo para la vida. No contiene componentes reparables por el usuario. Toda reparación debe ser llevada a cabo por técnicos calificados. Las certificaciones de seguridad no tienen vigencia cuando el voltaje de funcionamiento de la unidad es cambiado a un valor distinto al ajustado en fábrica.

! IMPORTANTES INSTRUÇÕES DE SEGURANÇA !

1. LEIA estas instruções.
2. GUARDE estas instruções.
3. PRESTE ATENÇÃO a todas as advertências.
4. SIGA todas as instruções.
5. NÃO use este aparelho perto de água.
6. LIMPE SOMENTE com um pano seco.
7. NÃO bloquee nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.
8. NÃO instale próximo de nenhuma fonte de calor, tais como radiadores, bocais de aquecimento, fornos ou outros aparelhos que produzam calor (inclusive amplificadores).
9. NÃO utilize as características de segurança do conector polarizado ou com pino de aterramento. Um conector polarizado possui duas lâminas com uma mais larga do que a outra. Um conector com pino de aterramento possui duas lâminas e um terceiro pino de aterramento. É fornecida uma lâmina mais larga ou o terceiro pino para a sua segurança. Se por acaso o conector não se encaixar na tomada, chame um eletricista para substituir a tomada obsoleta.
10. PROTEJA o cabo de alimentação, evitando que seja pisado ou que enrosque, especialmente nos conectores, nas tomadas elétricas de emprego geral e no ponto onde elas saem do aparelho.
11. USE SOMENTE acessórios/apetrechos especificados pelo fabricante.

12. USE somente com um carrinho, pedestal, tripé, suporte ou mesa especificados pelo fabricante ou vendidos com o aparelho. Quando utilizar um carrinho, tenha cuidado ao movimentar o conjunto aparelho/carrinho para evitar danos com a queda do mesmo.
13. DESLIGUE este aparelho da tomada elétrica durante tempestades com relâmpagos ou quando não seja utilizado por longo período.
14. DEIXE toda a manutenção sob a responsabilidade de uma equipe de manutenção qualificada. É necessário realizar a manutenção quando por algum motivo o aparelho tiver sido danificado de alguma forma, como por exemplo por dano do cabo de alimentação elétrica ou do seu conector, por derramamento de líquido ou queda de objetos no aparelho, se o aparelho tiver sido exposto à chuva ou à umidade, não esteja operando normalmente ou tenha sofrido queda.
15. NÃO exponha o aparelho a respingos ou goteiras. NÃO coloque objetos cheios de líquidos, tais como vasos, em cima do aparelho.
16. A tomada de rede elétrica ou um acoplador do aparelho deve estar prontamente operável.
17. O ruído aéreo do aparelho não ultrapassa 70 dB (A).
18. O aparelho com construção CLASSE I deve estar conectado à tomada da rede elétrica com ligação à terra.
19. Para reduzir o risco de incêndio ou choque elétrico, não exponha este aparelho à chuva ou umidade.
20. Não tente alterar este produto. Isso poderá resultar em lesão pessoal e/ou falha do produto.



Este símbolo indica que existe nesta unidade tensão perigosa que apresenta risco de choque elétrico.



Este símbolo indica que existem instruções de operação e manutenção importantes na literatura que acompanha esta unidade.

ATENÇÃO: As tensões neste equipamento podem causar acidentes fatais. Dentro dele não há nenhuma peça na qual se possa efetuar manutenção. Deixe toda a manutenção a cargo de equipe de manutenção qualificada. As certificações de segurança perderão a validade quando a tensão de operação ajustada na fábrica for alterada.

⚠️ WARNING!

LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE.

USE AS LOW A VOLUME AS POSSIBLE.

Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

90 dB SPL at 8 hours	95 dB SPL at 4 hours	100 dB SPL at 2 hours	105 dB SPL at 1 hour
110 dB SPL at 1/2 hour	115 dB SPL at 15 minutes	120 dB SPL	Avoid or damage may occur

SAFETY PRECAUTIONS

The possible results of incorrect use are marked by one of the two symbols - "WARNING" AND "CAUTION" - depending on the imminence of the danger and the severity of the damage.

⚠️ **WARNING:** Ignoring these warnings may cause severe injury or death as a result of incorrect operation.

⚠️ **CAUTION:** Ignoring these cautions may cause moderate injury or property damage as a result of incorrect operation.

⚠️ WARNING

- If water or other foreign objects enter the inside of the device, fire or electric shock may result.
- Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.

WARNING: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm

⚠️ CAUTION

- Never disassemble or modify the device, as failures may result.
- Do not subject to extreme force and do not pull on the cable or failures may result.
- Keep the microphone dry and avoid exposure to extreme temperatures and humidity.

⚠️ ADVERTENCIA

EL ESCUCHAR REPRODUCCIONES DE AUDIO A NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AL OÍDO. USE EL VOLUMEN MÁS BAJO POSIBLE.

La exposición prolongada a niveles sonoros excesivamente intensos puede dañar los oídos y causar una pérdida permanente del oído causada por ruidos. Respete los lineamientos dados a continuación, los cuales fueron establecidos por la Administración de Salud y Seguridad Ocupacional (OSHA) de los EE.UU. e indican el tiempo máximo que puede escucharse un nivel determinado de presión sonora (SPL) antes de producirse daños al oído.

90 dB SPL por 8 horas	95 dB SPL por 4 horas	100 dB SPL por 2 horas	105 dB SPL por 1 hora
110 dB SPL por 1/2 hora	115 dB SPL por 15 minutos	120 dB SPL	Evítese por completo, puesto que puede causar daños inmediatos

PRECAUCIONES DE SEGURIDAD

Los posibles resultados del uso incorrecto de este producto se denotan por medio de uno de dos símbolos - "ADVERTENCIA" y "PRECAUCION" - según la imminencia del peligro y el grado de severidad de los daños.

⚠️ **ADVERTENCIA:** Si se pasan por alto estas advertencias se podría causar lesiones graves o mortales como resultado del uso incorrecto.

⚠️ **PRECAUCION:** Si se pasan por alto estas precauciones se podría causar lesiones moderadas y daños a la propiedad como resultado del uso incorrecto.

⚠️ ADVERTENCIA

- Si el agua u otros objetos extraños penetran el dispositivo, se podría causar un incendio o sacudidas eléctricas.
- No intente modificar este producto. Hacerlo podría causar lesiones personales y/o la falla del producto.

⚠️ PRECAUCION

- Nunca desarme ni modifique el dispositivo, ya que esto podría causar fallas.
- No someta el aparato a fuerzas extremas ni tire de su cable, ya que esto podría causar fallas.
- Mantenga el micrófono seco y evite exponer el aparato a niveles extremos de temperatura y humedad.

⚠️ ACHTUNG!

MÖGLICHST GERINGER LAUTSTÄRKEPEGEL VERWENDEN.

Längerfristiges Hören bei übermäßigen Schallpegeln kann zu Hörschäden und zu permanentem, durch Lärm verursachten Gehörverlust führen. Bitte orientieren Sie sich an den folgenden von der Occupational Safety Health Administration (OSHA; US-Arbeitsschutzbörde) erstellten Richtlinien für die maximale zeitliche Belastung durch Schalldruckpegel, bevor es zu Hörschäden kommt.

bei 90 dB Schalldruckpegel max. 8 Stunden	bei 95 dB Schalldruckpegel max. 4 Stunden	bei 100 dB Schalldruckpegel max. 2 Stunden	bei 105 dB Schalldruckpegel max. 1 Stunde
bei 110 dB Schalldruckpegel max. ½ Stunde	bei 115 dB Schalldruckpegel max. 15 Minuten	120 dB Schalldruckpegel vermeiden; ansonsten können Schäden auftreten	

SICHERHEITSVORKEHRUNGEN

Die möglichen Folgen des fehlerhaften Gebrauchs, die durch eines der beiden Symbole - „ACHTUNG“ und „VORSICHT“ - markiert sind, hängen von der Unmittelbarkeit der bevorstehenden Gefahr und des Schweregrads der Beschädigung ab.

⚠️ **ACHTUNG:** Die Nichtbeachtung dieser Warnhinweise kann schwere oder tödliche Verletzungen infolge des fehlerhaften Gebrauchs verursachen.

⚠️ **VORSICHT:** Die Nichtbeachtung dieser Vorsichtshinweise kann mittelschwere Verletzungen oder Sachschäden infolge des fehlerhaften Gebrauchs verursachen.

⚠️ ACHTUNG

- Falls Wasser oder andere Fremdstoffe/-körper in das Gerät gelangen, kann es zu Bränden oder Stromschlägen kommen.
- Nicht versuchen, dieses Produkt zu modifizieren. Ansonsten könnte es zu Verletzungen und/oder zum Produktausfall kommen.

⚠️ VORSICHT

- Das Gerät nie auseinanderbauen oder modifizieren, da dies zu Ausfällen führen kann.
- Keinen extremen Kräften aussetzen und nicht am Kabel ziehen, da dies zu Ausfällen führen kann.
- Das Mikrofon trocken halten und keinen extremen Temperaturen oder extremer Luftfeuchtigkeit aussetzen.

⚠️ AVERTISSEMENT !

L'ÉCOUTE AUDIO À UN VOLUME SONORE EXCESSIF PEUT CAUSER DES LÉSIONS AUDITIVES PERMANENTES. RÉGLER LE VOLUME LE PLUS BAS POSSIBLE.

Une surexposition à des volumes sonores excessifs peut causer des lésions aux oreilles entraînant une perte auditive permanente due au bruit. Se conformer aux directives ci-dessous, établies par l'Occupational Safety Health Administration (OSHA) pour les limites de durée d'exposition aux pressions acoustiques (SPL) avant de risquer des lésions auditives.

SPL de 90 dB pendant 8 heures	SPL de 95 dB pendant 4 heures	SPL de 100 dB pendant 2 heures	SPL de 105 dB pendant 1 heure
SPL de 110 dB pendant 1/2 heure	SPL de 115 dB pendant 15 minutes	SPL de 120 dB	À éviter : risque de lésions auditives

PRÉCAUTIONS DE SÉCURITÉ

Les résultats possibles d'une utilisation incorrecte sont signalés par l'un des deux symboles - AVERTISSEMENT et ATTENTION - selon l'imminence du danger et la sévérité des dommages.

⚠️ **AVERTISSEMENT :** L'ignorance de ces avertissements peut causer des blessures graves ou la mort suite à une utilisation incorrecte.

⚠️ **ATTENTION:** L'ignorance de ces mises en garde peut causer des blessures modérées ou des dégâts matériels suite à une utilisation incorrecte.

⚠️ AVERTISSEMENT

- Si de l'eau ou autres matériaux étrangers pénètrent dans l'appareil, il y a risque d'incendie ou de choc électrique.
- Ne pas essayer de modifier ce produit. Une telle opération est susceptible d'entraîner des blessures ou la défaillance du produit.

⚠️ ATTENTION

- Ne jamais désassembler ou modifier cet appareil sous peine de provoquer des défaillances.
- Ne pas soumettre le câble à des forces extrêmes et ne pas tirer dessus sous peine de provoquer des défaillances.
- Maintenir le microphone sec et éviter de l'exposer à des températures extrêmes et à l'humidité.



AVVERTENZA

L'ASCOLTO A VOLUME ECESSIVAMENTE ELEVATO PUÒ DANNEGGIARE L'UDITO IN MODO PERMANENTE. MANTENEZEL VOLUME AL PIÙ BASSO LIVELLO POSSIBILE.
La sovraesposizione a livelli sonori eccessivi può danneggiare l'uditivo provocando una perdita di udito permanente causata dal rumore. Si consiglia di attenersi alle seguenti direttive stabilite dalla **OSHA** (Occupational Safety Health Administration) sul tempo massimo di esposizione a vari livelli di pressione sonora (SPL), oltre il quale si rischia di causare lesioni all'apparato uditivo.

90 dB di SPL per 8 ore	95 dB di SPL per 4 ore	100 dB SPL per 2 ore	105 dB di SPL per 1 ora
110 dB di SPL per mezz'ora	115 dB di SPL per 15 minuti	120 dB di SPL Evitate l'esposizione per non rischiare di danneggiare l'uditivo	



ВНИМАНИЕ:

ПРОСЛУШИВАНИЕ ЗВУКА ПРИ ЧРЕЗМЕРНО ВЫСОКОЙ ГРОМКОСТИ МОЖЕТ ПРИВЕСТИ К НЕОБРАТИМОМУ ПОВРЕЖДЕНИЮ СЛУХА. ИСПОЛЬЗУЙТЕ КАК МОЖНО БОЛЕЕ НИЗКУЮ ГРОМКОСТЬ.

Длительное воздействие звука чрезмерно высокого уровня может причинить вам вред, вызвав необратимую потерю слуха из-за шума. Во избежание потери слуха руководствуйтесь следующими правилами, установленными Управлением охраны труда (**OSHA**) в отношении максимального времени воздействия различных уровней звукового давления (УЗД).

УЗД 90 дБ 8 часов	УЗД 95 дБ 4 часа	УЗД 100 дБ 2 часа	УЗД 105 дБ 1 час
УЗД 110 дБ 1/2 часа	УЗД 115 дБ 15 минут	УЗД 120 дБ Недопустимо — ведет к повреждению слуха	

PRECAUZIONI DI SICUREZZA

I possibili effetti di un uso errato sono contrassegnati da uno dei due simboli - "AVVERTIMENTO" E "ATTENZIONE" — a seconda dell'incombenza del pericolo e della gravità del danno.

AVVERTIMENTO: come conseguenza di un funzionamento errato, ignorare questi messaggi può comportare lesioni personali gravi o mortali.

ATTENZIONE: come conseguenza di un funzionamento errato, ignorare questi messaggi può comportare lesioni personali di media gravità o danni alla cose.

AVVERTIMENTO:

- L'eventuale introduzione di acqua o di altri corpi estranei nel dispositivo può dare luogo allo sviluppo di incendi o a fulgorazione.
- Non tentate di modificare il prodotto. Tale operazione può causare infortuni e/o il guasto del prodotto stesso.

ATTENZIONE

- Per evitare di provocare possibili danni, non smontate né modificate il dispositivo.
- Per evitare di provocare possibili danni, non applicate una forza estrema sul cavo e non tiratelo.
- Mantenete il prodotto asciutto e non esponetelo a temperature estreme ed all'umidità.



ATENÇÃO!

OUVIR O SOM COM VOLUME MUITO ALTO PODE CAUSAR DANOS PERMANENTES À AUDIÇÃO. USE O VOLUME MAIS BAIXO POSSÍVEL.

A exposição a sons excessivamente altos pode danificar os ouvidos e resultar em perda permanente da audição devido ao ruído. Siga as recomendações estipuladas pela Administração de Saúde e Segurança do Trabalho dos E.U.A. (U.S. Occupational Safety Health Administration-**OSHA**) sobre o máximo tempo de exposição a determinados níveis de pressão sonora (SPL) a fim de evitar danos à audição.

90 dB SPL por 8 horas	95 dB SPL por 4 horas	100 dB SPL por 2 horas	105 dB SPL por 1 hora
110 dB SPL por ½ hora	115 dB SPL por 15 minutos	120 dB SPL Evite ou poderá ocorrer dano	

MEDIDAS DE SEGURANÇA

Os possíveis resultados do uso incorreto são marcados por um de dois símbolos - "ATENÇÃO" e "CUIDADO" - dependendo da iminência do perigo e da severidade do dano.

ATENÇÃO: Não seguir esses avisos de atenção pode causar lesão grave ou morte em consequência da operação incorreta.

CUIDADO: Não seguir esses avisos de cuidado pode causar lesão moderada ou danos à propriedade em consequência da operação incorreta.

ATENÇÃO

- Incêndio ou choque elétrico pode ocorrer caso água ou objetos estranhos entrem no dispositivo
- Não tente modificar este produto, pois pode resultar em lesão pessoal e/ou falha do produto.

CUIDADO

- Não desmonte ou modifique o dispositivo uma vez que pode resultar em falhas.
- Não sujeite à força demasiada e não puxe o cabo pois pode resultar em falhas.
- Mantenha o microfone seco e evite expor a temperaturas extremas e umidade.

УКАЗАНИЯ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ

Возможные результаты неправильного использования отмечены одним из двух знаков - «ВНИМАНИЕ» и «ОСТОРОЖНО» - в зависимости от неизбежности опасности и серьезности повреждений.

ВНИМАНИЕ: Игнорирование этих предупреждений может привести к серьезной травме или смерти в результате неправильной эксплуатации.

ОСТОРОЖНО: Игнорирование этих предупреждений может привести к незначительной травме или повреждению имущества в результате неправильной эксплуатации.

ВНИМАНИЕ

- Если в устройство попадет вода или иные посторонние предметы, это может привести к возгоранию или поражению электрическим током.
- Не пытайтесь модифицировать это изделие. Это может привести к личной травме и (или) поломке изделия.

ОСТОРОЖНО

- Ни в коем случае не разбирайте и не модифицируйте это устройство, поскольку это может привести к поломке.
- Не подвергайте сильным нагрузкам и не тяните за кабель - это может привести к поломке.
- Содержите микрофон сухим и не подвергайте его воздействию очень высоких или низких температур и влажности.

PSM1000

The PSM 1000 Personal Monitor System from Shure brings personal monitoring to its most advanced level yet. The full-rack, dual-channel, networkable transmitter is ideally suited for the demands of elite-level professional touring and installation applications, and the diversity bodypack receiver delivers pristine RF signal and audio quality. Networkability over Ethernet connection enables remote control of transmitter functions and comprehensive frequency coordination via Wireless Workbench software.

Features

Advanced Setup and Operation


- Visual display of scan plotting in a rich graphical environment
- Remote control of transmitter settings:
 - RF mute enable/disable
 - RF output power adjustments
 - Aux/line level
 - Audio input level
 - Channel/device name edit
- Directly update firmware with WWB

Touring-Grade Performance

- Full rack, dual channel transmitter in a rugged, professional chassis
- Twin-antenna diversity bodypack virtually eliminates drop-outs from interference
- Precision front-end RF filtering reduces RF interference for a cleaner, stronger RF signal, fewer dropouts, and less audible artifacts
- CueMode allows monitoring of different stage mixes and storing of up to 20 separate channels on one bodypack for quick and easy reference
- Internal power supply with IEC in/out ports enables easy power chaining in the rack
- Backwards compatibility

Components


- P10T Rackmount Transmitter
 - P10R Bodypack Receiver (2)
 - Two 1/2 Wave Antennas
 - AA Batteries (4)
 - Antenna Cables (2)
 - IEC Power Cable and IEC Extension Cable
 - Ethernet Network Cable
 - Zippered Bag
- Rackmount supplies:
- 2 antenna hole plugs
 - 4 rack mounting screws with washers

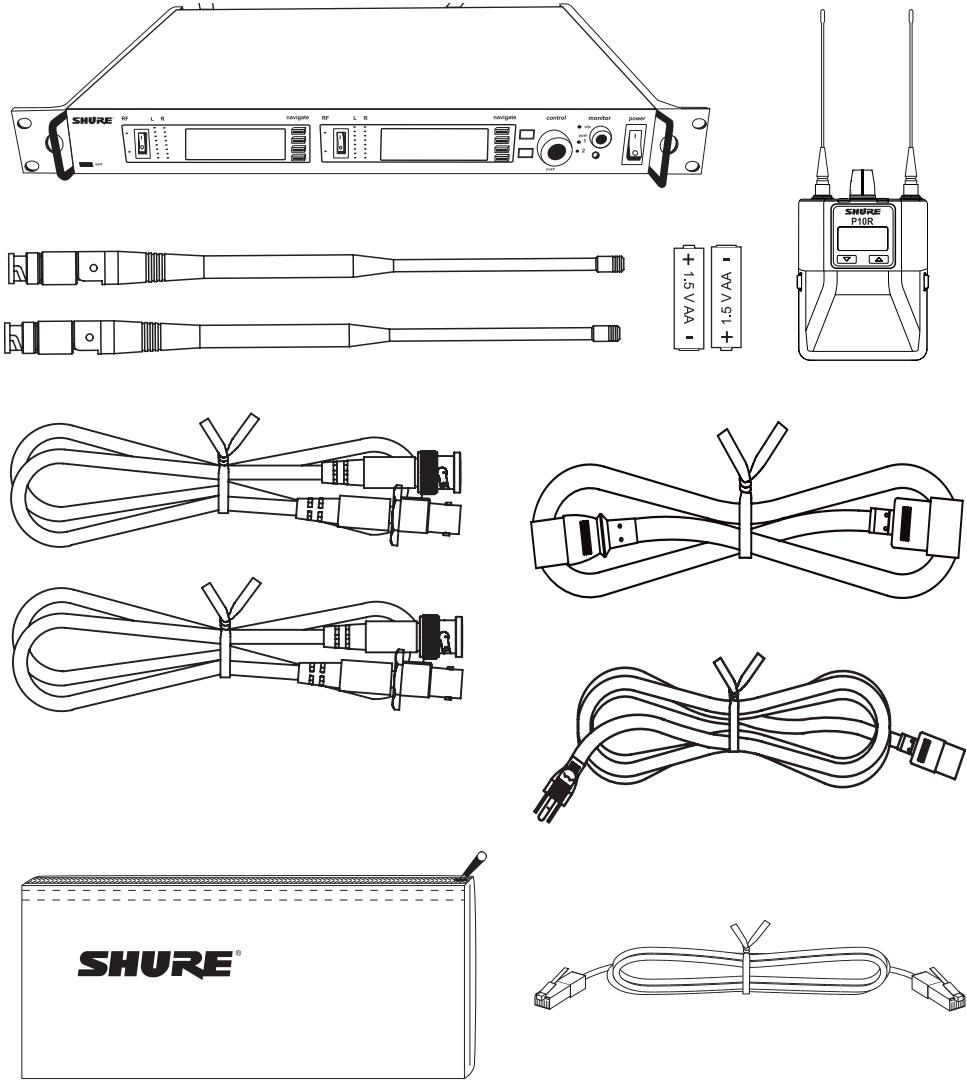

Quickstart Instructions


Rack Mount Transmitter

1. Connect to a power outlet using the supplied power cable.
2. Attach the supplied antennas to the **antenna out** BNC connectors.
3. Connect the audio source, such as the output of a mixer, to the audio inputs. You can use both input jacks or choose either one for a mono source.
4. Switch RF off and power on.
5. For mono (one input), access the **Audio** menu and select **Mono**. Set the input sensitivity to match the source using the **Util > Audio > Input** setting.
6. Adjust the audio source level so that, for the average input signal level, the top two yellow LEDs flicker and the lower LEDs are solid. If the red clip LED illuminates and a warning appears on the LCD, the inputs are overdriven. Decrease the audio input level to **+4 dBu** from the **Audio** menu. If the signal level is too low, change the input sensitivity to **-10 dBV**

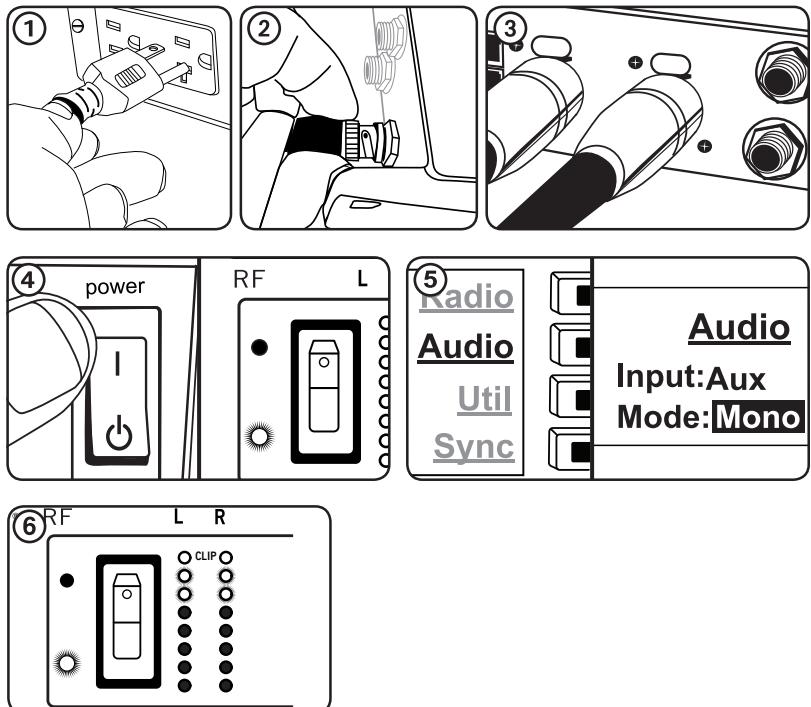

Bodypack


Open by pressing the latches on both sides and pulling. Insert the batteries or battery pack and attach antennas. Turn on using the volume knob. The battery light illuminates.

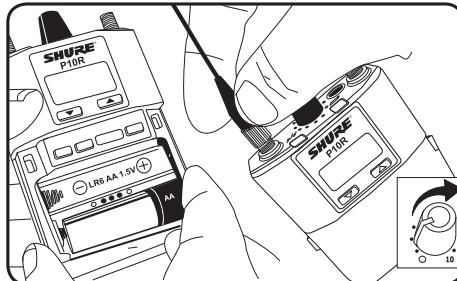


Scan and Sync

1. On the bodypack, press the **scan** button. The display flashes **SYNC NOW...**.
2. Align the IR windows on the bodypack and rack unit, the IR window on the transmitter illuminates. Press the **sync** button on the transmitter.
3. The rack unit **Level** LEDs flash, and it displays **SYNC SUCCESS**. Close bodypack.
4. Turn the RF switch on. The blue RF LED illuminates on the bodypack to indicate that it is detecting the transmitter. The bodypack also displays the RF signal strength (RF).
5. **Important:** Turn bodypack volume down before plugging in earphones.
6. Insert the earphones and slowly turn up the volume.

Important: Remove the protective film from the face of the transmitter or the IR sync may not work.

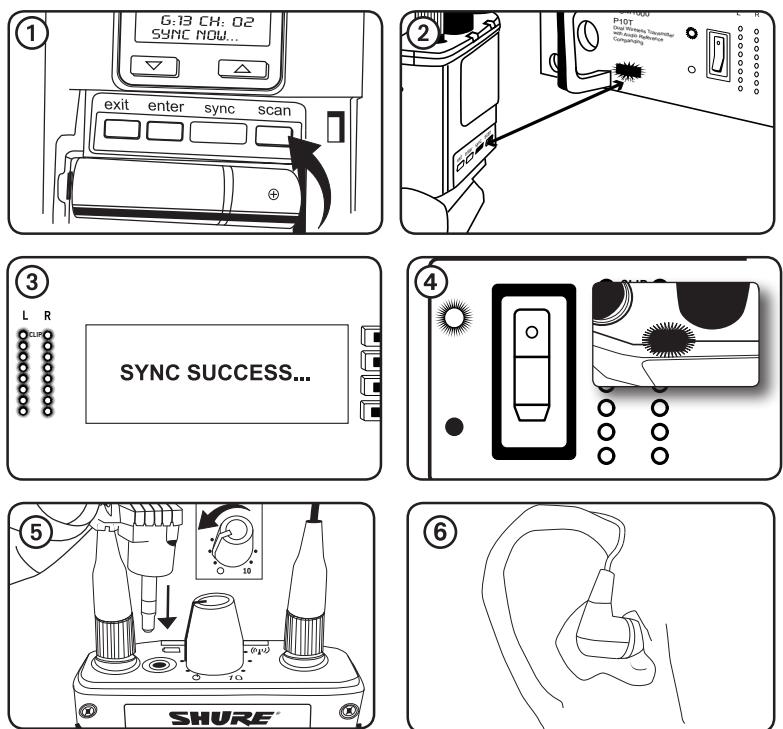

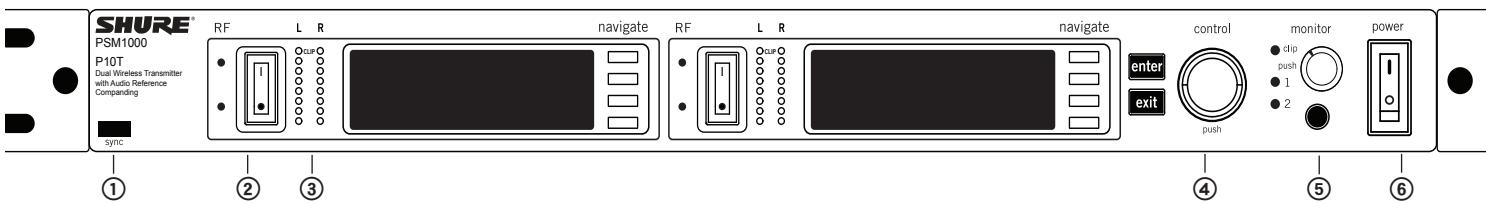

Front Panel Controls

① Sync Window

Align bodypack IR window with sync window on TX.

② RF Switch

Mutes RF output. For setting up multiple systems or adjusting settings without transmitting unwanted RF or audio signals.

③ Audio Indicators

Use the control wheel to adjust the audio so that, for the average input signal level, the top two yellow LEDs flicker and the lower LEDs are solid. Press the **enter** button to save the value, **exit** to cancel. The red clip LED indicates the inputs are overdriven. Reduce the level at the audio source or change the input sensitivity of the rack unit from the **Audio > Input** menu.

④ Status Display and Controls


Use the navigation buttons to access the configuration menu. Push the control wheel to move the cursor to the next item. Turn the control wheel to change a parameter—the **enter** button flashes. Press it to save the value. Press the **exit** button to cancel changes and return to the previous menu.

⑤ Headphone Monitoring

The monitor control adjusts signal output to the 3.5 mm headphone jack. Push button to toggle between transmitters. Monitor clip LED indicates headphone audio is clipping.

⑥ Power Switch

Turns the unit on and off.

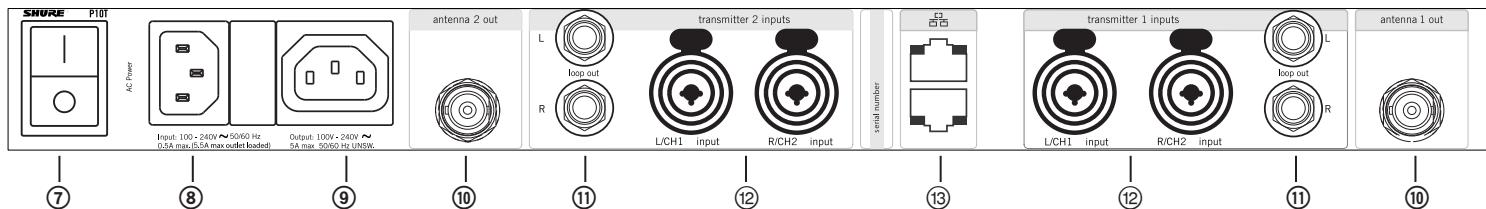

Rear Panel

⑦ Primary power switch

This switch disconnects power to the unit. It is not affected by the interface power lock in the **Util** menu. Only the front power switch can be locked.

⑧ Power plug

AC mains power input, IEC Connector 100-240 Vac.

⑨ AC mains power passthrough

Use with an IEC extension cable to supply AC power to another device. Unswitched.

⑩ Antenna (BNC) port

Attach supplied antennas. If you are rack mounting, use a front panel or remote mounting kit from Shure.

⑪ loop out

Sends audio signal going into the transmitter to another device.

⑫ Audio Inputs

Connect to balanced or unbalanced outputs. Use either jack for mono input. Accepts male XLR or 6.35 mm (1/4-inch) TRS plugs.


⑬ Ethernet Jack

Two-port RJ-45 Ethernet jack for connection to a network or computer.

Transmitter Menu Structure and Navigation


Home Screen

The home screen provides access to submenus and displays a summary of transmitter settings.

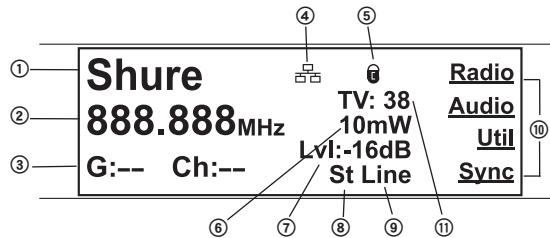

- ① Audio channel name
- ② Frequency setting
- ③ Group and Channel
- ④ Network Icon
- ⑤ Lock Icon
- ⑥ RF Power Level
- ⑦ Audio Level
- ⑧ Mix-mono or stereo
- ⑨ Aux/Line in
- ⑩ Submenus
- ⑪ TV Channel


Menu Navigation

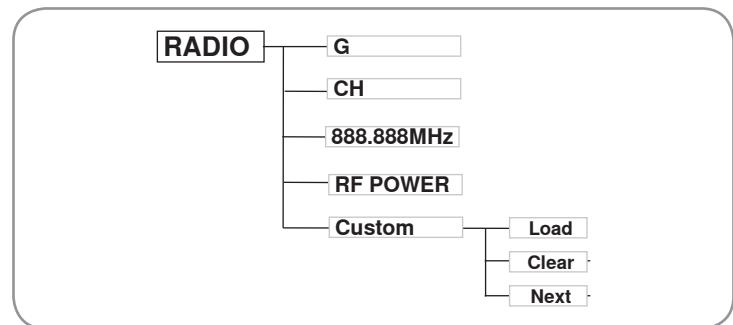

Radio Frequency (RF) Settings

Access the **Radio** menu to adjust the frequency and power at which the unit operates.

- G** Group number. Each group contains channels selected to work well together in a single installation.
- Ch** Channel number. Sets the transmitter to a channel in the selected group.
- 888.888 MHz** Displays the frequency to which the transmitter is set. Frequency selection; adjustable in increments of 1MHz or kHz.
- PWR** Power level at which the transmitter operates. Select from 10, 50, or 100 mW (power levels vary by region).
- Custom** For creating custom frequency groups. See Custom Groups.

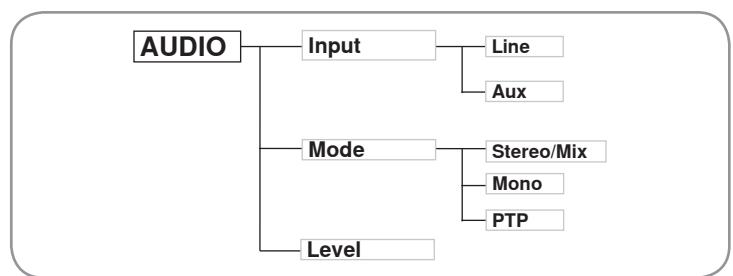

Audio Settings

Access the following settings from the **Audio** menu.

Input Level (Input)

This changes the audio level for the inputs on the back of the rack transmitter.

- Line** +4 dBu (line level)
- Aux** -10 dBV (aux level)

Audio Mode (Mode)


Stereo/MX Transmits each input as a separate channel.

Mono Combines both inputs into a single channel.

PTP Set up the device for point-to-point wireless audio.

Output Level (Level)

Adjust output level.

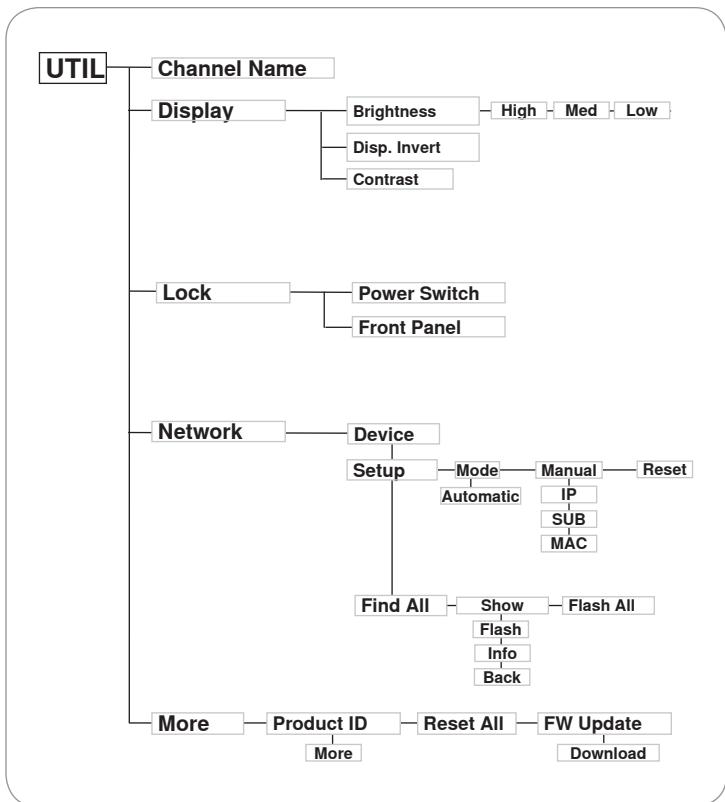

Utility Settings

Channel Name

Util > Channel Name Turn control wheel to change channel name. You can set a different name for each channel on the device (this name is uploaded to the bodypack with sync).

Display Settings

Util > Display Change the look of the LCD panel from the display menu.

Brightness Sets display brightness to high, low, or medium.

Disp. Invert Changes display from light on dark to dark on light.

Contrast Use the control wheel to adjust contrast.

Interface Locks Use these controls to lock or unlock power switch and front panel controls.

Power Switch

Util > Lock > Power Switch

Locked Locks power switch.

Off Unlocks power switch.

Front Panel

Util > Lock > Front Panel

Locked Locks the controls on the front panel for the selected transmitter.

Off The front panel is unlocked.

Unlocking Front Panel

To unlock the front panel, select **Util > Unlock**

Network Setup

Use this menu to find, display and change how this device connects to the network. There is one set of network settings for both transmitters.

Device Identification (Device)

Allows you to assign a display name. This applies to both channels on the device. To name each channel individually, use the **Channel Name** setting.

Setup (Mode)

Automatic Default setting for use with DHCP networks.

Manual Manual IP addressing. Allows you to enter an IP address (**IP**) and subnet mask (**SUB**).

MAC Displays MAC address for this device, view only, and there is only one MAC address for both transmitters.

Reset Manual mode only. Resets network settings to the factory defaults.

Find All Network Devices (Find All)

Lists all network devices.

- Scroll to any of the listed devices and press **Show Info** to view information about that device.
- Press **Flash** to flash the LEDs of all devices on network
- Press **Back** to return to previous screen


Additional Settings (More)

Product ID

Displays product serial number.

Reset All Restores the values on all networked devices to factory default settings.

FW Update Displays the receiver firmware version that is currently stored in the transmitter. Press **Download** to transfer the update to a receiver through the IR port.

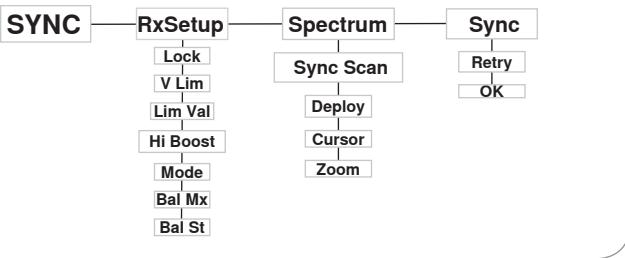

Receiver Synchronization Menu (Sync)

Transferring Settings to the Bodypack During Sync (RxSetup)

Use this feature to store settings that will be transferred to the bodypack during a sync.

Each parameter has the default value **NoChange**, which leaves that setting unaffected by a sync.

Lock

ON: Locks the bodypack interface.

Off: Unlocks the bodypack interface.

V Lim

ON: Turn volume limit on.

Off: Turn volume limit off.

Lim Val Sets value for volume limit.

HiBoost Sets value for high frequency boost.

Mode Sets stereo (**ST**) or MixMode (**MX**).

Bal Mx Sets balance for MixMode.

Bal St Sets balance for stereo mode.

Downloading and Viewing Spectrum Scan Data (Spectrum)

Align the receiver and transmitter IR ports and press **SyncScan** to download spectrum scan data from the receiver.

After downloading data, the following options are available:

Deploy Enters a submenu from which you can deploy open frequencies to all transmitters on the network.


Cursor Enables the control wheel to move the cursor.

Zoom Enables the control wheel to zoom into graphic at cursor position.

Tip: Push the control wheel to toggle between cursor and zoom modes.

Sync Press to sync the receiver and transmitter using the IR port.

Bodypack Receiver

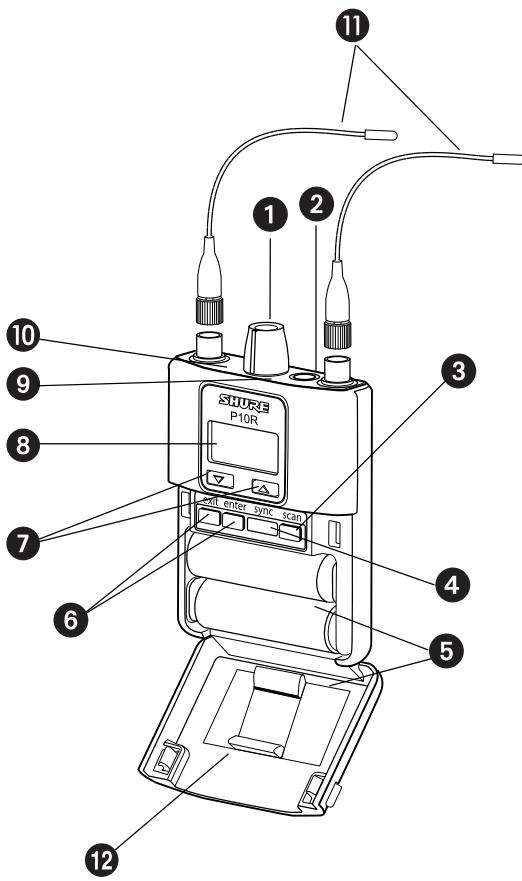

① Power Switch and Volume Control

Turns the bodypack on and off and adjusts earphone volume.

② 3.5 mm Earphone Jack

Insert earphones here.

③ Scan Button

Press the scan button to find an available frequency. Press and hold for two seconds to find the group with the most available channels.

④ IR Window

For transmitting settings between bodypack and rack unit.

⑤ Battery Compartment

Requires 2 AA batteries or Shure rechargeable battery. Open by pressing the latches on both sides and pulling.

⑥ Menu buttons

Use in conjunction with the ▲▼ buttons to access the configuration menus.

⑦ ▲▼ Buttons

Use to adjust the audio mix (in MixMode only), or in conjunction with the menu buttons to change settings.

⑧ LCD Screen

Displays current settings and menus.

⑨ Tri-Color Battery LED

Illuminates green, amber, or red to indicate battery power. When red, change battery immediately.

⑩ Blue RF LED

Indicates the bodypack is receiving a signal from the transmitter.

⑪ SMA Connector

For detachable antennas.

⑫ Removable AA Adapter

P10R is shipped with an adapter which can be removed to accommodate a Shure rechargeable battery pack.

Note: To remove adapter, open door and slide out. To reinstall adapter, place over the clip and press, there will be an audible click when seated.

RF Settings

Access the following RF settings from the **RADIO** menu.

G: Group number. Each group contains channels selected to work well together in a single installation.

CH: Channel number. Sets the receiver to a channel in the selected group.

888.888 MHz Displays the frequency to which the transmitter is set. Highlight and use the **▼▲** buttons to set the transmitter to a specific frequency.

SQUELCH Adjusts the squelch setting.

FULL SCAN Performs spectrum scan and displays open frequencies in a graphical interface.

RF PAD Attenuates antenna signals in 3 dB increments.

Audio Settings

Access the following audio settings from the **Audio** menu.

Output Mode (MODE)

STEREO Stereo

MIXMODE MixMode

High-Frequency EQ Boost (HIBOOST)

OFF No boost (flat).

4 dB 4 dB boost at 10 kHz.

2 dB 2 dB boost at 10 kHz.

Volume Limiter (V LIMIT)

V LIMIT Turns limiter on (**ON**) or off (**OFF**).

VALUE 3 to 9: analogous to volume knob position (for example, 5 is equal to the 5th dot on the volume knob).

Output Gain (GAIN)

HIGH Increases gain by 10 dB

STANDARD(STD) 0 dB of gain.

Battery Life

Battery Indicator	Tri-Color Battery LED	Approximate Hours Remaining			
		Alkaline Volume Level 4	Alkaline Volume Level 6	Alkaline Volume Level 8	Li-ION
	Green	5-7	2½-3	1½	7-8
	Green	3½-4	2½-2	1¼	6-7
	Green	3-3½	1½-2	1	4-6
	Green	2-2½	1½-1	¾	2-4
	Amber	½-1	1-¾	½	1-2
	Red	<½	<¾	<½	0-1

Note: Battery life using Energizer brand AA Alkaline batteries and the following conditions:

- Receiver audio set to **HIBOOST = OFF** and **V LIMIT = OFF**
- Transmitter audio **INPUT** set to **Line+4 dBu** and **Level** set to -9 dB
- Audio input to the transmitter: pink noise at +8.7 dBV
- Audio output at receiver: 115 dB SPL in ear with SE425 earphones

Note: Using lower-impedance earphones, different battery types, and higher gain settings in the PSM system may cause the receiver battery life to be different than specified.

Pink noise is a signal with a frequency spectrum such that the power spectral density is inversely proportional to the frequency. In pink noise, each octave carries an equal amount of noise power.

Utilities and Display Settings

Access the following settings from the **UTILITIES** menu.

CUEMODE Enters **CUEMODE** to exit, press **enter** and select **EXIT CUEMODE**

DISPLAY Change the display settings on the bodypack.

CONTRAST Sets display brightness to high, low, or medium.

LOCK PANEL Locks all controls except power and volume. To unlock, press **exit**, select **OFF**, and press **enter**.

BATTERY Displays the following: **Hrs: Min Left, temperature, Status, Cycle Count, and Health.**

RESTORE Returns receiver to factory default settings.

Multiple System Setup

When setting up multiple systems, designate a single bodypack to scan for available frequencies and download them to all the rack units.

The bodypack must be from the same frequency band as all the transmitters.

1. Power on all the rack units. **Turn off the RF** (This prevents them from interfering with the frequency scan.)

Note: Turn **on** all other wireless or digital devices as they would be during the performance or presentation (so the scan will detect and avoid any interference they generate).

2. Use the bodypack to **scan for a group** by pressing and holding the **scan** button for **two seconds**. The bodypack displays the group and the number of available channels, and flashes **SYNC NOW...**.

Important: Note the number of available channels. If you have more rack units than available channels, eliminate potential sources of interference and try again, or call Shure Applications for assistance.

3. Sync the bodypack with the first rack unit by aligning the IR windows and pressing **sync**.
4. Press **scan** again on the bodypack to find the next available frequency.
5. Sync the bodypack with the next rack unit.
6. Repeat with all the rack units.
7. Sync each performer's bodypack to its respective rack unit by aligning the IR windows and pressing **sync**. DO NOT press scan on the bodypacks.
8. Turn on the RF on all rack units. The systems are ready to use.

CueMode

CueMode allows you to upload the name and frequency settings from multiple rack units and store them as a list on a single bodypack. You can then, at any time, scroll through that list to hear the audio mix from each transmitter, just as each performer does during a show.

CueMode lists are retained even if CueMode is exited, the bodypack is turned off, or batteries are removed.

Note: Set the channel frequency and assign display names for each transmitter **before** creating your CueMode list.

Adding Transmitters to the CueMode List

Note: The transmitter must be from the same frequency band as the bodypack.

1. Open the battery door and press the **enter** button.
2. From the main menu, scroll to **UTILITIES** and press **enter**. Select **CueMode** and press **enter** again.
3. Align IR windows and press **sync** on the rack unit.

The LCD displays **SYNC SUCCESS** after frequency and name data are uploaded to the CueMode list. It also displays the CueMode number for that transmitter and the total number of transmitters.

4. Repeat the above step for each transmitter.

Note: Syncing while in CueMode does not change any of the settings on the bodypack.

Auditioning Mixes

1. Enter CueMode from the **UTILITIES** menu.
2. Use the **▼▲** buttons to scroll through your CueMode list to hear the mixes.

Exiting CueMode

Exit CueMode by pressing **enter** and selecting **EXIT CUEMODE**.

Managing CueMode Mixes

While in Cue Mode, you can access the following menu by pressing **enter**:

REPLACE MIX Select and press sync on a rack unit to upload new data for the current mix (for example, if you have changed the transmitter frequency).

DELETE MIX Removes the selected mix.

DELETE ALL Removes all mixes.

EXIT CUEMODE Exits CueMode and returns the bodypack to the previous frequency setting.

Frequency Scan

Use a frequency scan to analyze the RF environment for interference and identify available frequencies. There are three types of scan:

- **Channel Scan** Press the scan button on the bodypack. Finds the first available channel.
- **Group Scan** Press and hold the scan button for two seconds. Finds the group with the greatest number of available channels. (Each group contains a set of frequencies that are compatible when operating multiple systems in the same environment.)
- **Full Scan** From the bodypack menu select **RADIO > FULL SCAN**. Press **RUN SCAN** to initiate a full scan. Press **SPECTRUM** to view full results in a graphical display.
- **Note:** When performing a frequency scan: **Turn off** the RF on the transmitters for the systems you are setting up. (This prevents them from interfering with the frequency scan.)
- **Turn on** potential sources of interference such as other wireless systems or devices, computers, CD players, large LED panels, effects processors, and digital rack equipment so they are operating as they would be during the presentation or performance (so the scan will detect and avoid any interference they generate).

Sync

You can transfer frequency settings in either direction: from the bodypack to the rack unit, or from the rack unit to the bodypack.

Note: You can also choose to transfer other settings to the bodypack during a sync, such as lock or mode settings, using the **Sync > RxSetup** menu on the rack transmitter.

Downloading settings from the bodypack

1. Press the **scan** button on the bodypack.
2. Align the IR windows and press the **sync** button from the rack transmitter LCD menu while the bodypack display is flashing "**SYNC NOW...**".
The level LEDs on the rack unit flash.

Sending settings to the bodypack

1. Align the IR windows.
2. Press the **Sync** button on the rack transmitter LCD menu.
The blue LED on the bodypack flashes.
3. Press **Sync** to transfer settings

When properly aligned the IR window on the transmitter illuminates.

Creating Custom Groups

This feature allows you to create your own groups of frequencies.

Menu: **Radio > Custom**

1. Turn the Control wheel to select a custom group from the **Group** menu. (U1, U2, etc.)
2. Push the Control wheel to move to the Channel parameter and turn it to select a channel (01, 02, 03, etc.)
3. Push the Control wheel to move to the Freq parameter and select a frequency for that channel.
4. Push the **Next** menu key to select a frequency for the next channel in that group.
5. Select **Load** to find all other devices of the same model and band on the network. Then press **enter** to deploy the custom group list to all these devices.

This overwrites all existing custom groups.

6. **Clear** deletes all custom groups for all devices on the network.

MixMode

Some performers need to hear more of their own voice or instrument, while others want to hear more of the band. With MixMode, the performer creates their own mix using the balance control (**▼▲** buttons) on the bodypack.

To use MixMode, send a solo mix of the performer to the **CH. 1 IN** input on the transmitter, and send a band mix to the **CH. 2 IN** input.

Set the performer's bodypack for MixMode. The bodypack combines the two signals and sends them to both earphones, while the balance control on the bodypack adjusts the relative levels for each.

LOOP Applications

Use **LOOP OUT L** (left) and **R** (right) outputs to send a copy of the audio signal going into the transmitter to other devices. Following are a few of the many applications for these outputs.

Note: The input level control and the input pad do not affect the **LOOP OUT** signals.

MixMode for Multiple Systems

Configure each system for MixMode. From the mixing console, send a mix of the whole band to input 2 of the first transmitter. Connect the **LOOP OUT R** output to the **CH. 2 IN** input of the next transmitter. Continue the chain with all the transmitters.

Next, create solo mixes for each performer. Send each mix to input 1 of the transmitter for that performer.

Floor Monitors

Send the audio from the LOOP outputs to onstage loudspeakers. The bodypack and the onstage monitors receive the same audio signals.

Recording Devices

To record a performance, connect the LOOP outputs to the inputs of a recording device.

Squelch

Squelch mutes audio output from the bodypack when the RF signal becomes noisy. While squelch is activated, the blue LED on the bodypack turns off.

For most installations, squelch does not need adjustment, and it keeps the performer from hearing hiss or noise bursts if the RF signal becomes compromised. However, in congested RF environments or in close proximity to sources of RF interference (such as large LED video panels), the squelch may need to be lowered to prevent excessive audio dropouts. With lower squelch settings, the performer may hear more noise or hiss, but will experience fewer audio dropouts.

Important: Before lowering squelch, first try to eliminate the problem by finding the best set of frequencies for your installation and removing potential sources of interference.


Caution: Turning off or lowering the squelch setting can increase the noise level and cause discomfort to the performer:

- Do not lower the squelch setting unless absolutely necessary.
- Turn earphone volume to the lowest setting before adjusting squelch.
- Do not change the squelch setting during a performance.
- Turn up the transmitter **level** setting to make noise or hiss less noticeable.

Squelch Settings

HIGH (NORMAL)	Default factory setting.
MID	Moderately decreases the signal-to-noise ratio required to squelch the receiver.
LOW	Greatly decreases the noise squelch threshold.
PILOT ONLY 	Turns off noise squelch leaving only pilot squelch on. symbol appears in display window
NO SQUELCH 	Turns off noise and pilot tone squelch. (Sometimes used as a debugging tool by monitor engineers or RF coordinators to "listen" to the RF environment.)

Point-to-Point Wireless Audio

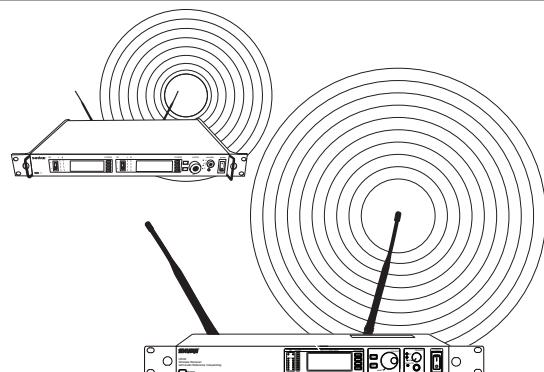

Use PTP mode to allow a P10T to transmit to a UHF-R receiver. This allows a transmitter and receiver setup where both units are racked and powered by AC.

For more information visit: www.shure.com/americas/products/personal-monitor-systems

Ethernet Connection

Each transmitter has an RJ-45 port on the back for connecting to other transmitters over an Ethernet network. Networking transmitters allows you to automatically set frequencies for all the transmitters with a single group scan command.

Add transmitters to a network using the default automatic network setting (**Util > Network > Mode > Automatic**):

1. Connect transmitters to an Ethernet router with DHCP service.
2. Use Ethernet switches to extend the network for larger installations.
3. Connect transmitters in series.


Accessing the Network with a Computer

You can control and monitor all networked units through a computer running Shure Wireless Workbench software. If using the default automatic network setting, make sure your computer is configured for DHCP.


Note: Some security software or firewall settings on your computer can prevent you from connecting to the transmitter. If using firewall software, allow connections on port 2201.

Connecting Transmitters

Connection to Computer

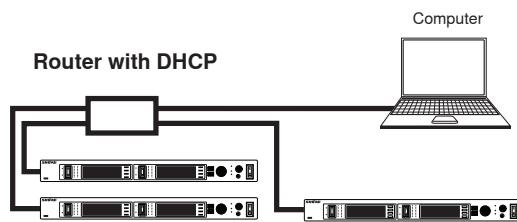

Extended Network

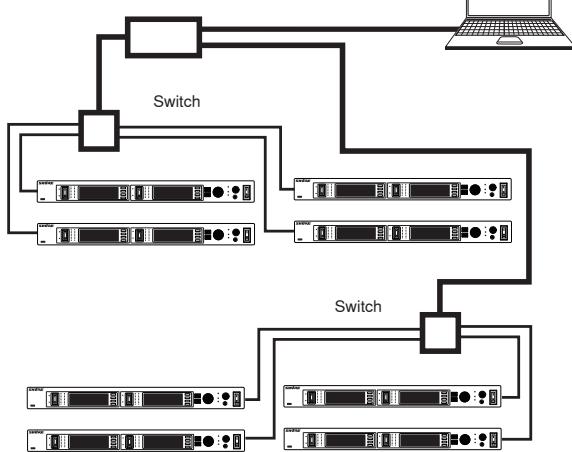

Switch

Static IP Addressing

Static IP addressing is also supported. An IP address can be assigned through the network menu (**Util > Network > Mode > Manual**).

Note: Dual transmitters use a single IP address, which may be set through either LCD interface.



Direct

Connecting to an AMX or Crestron System

The following messages can be used to communicate with an AMX or Crestron unit across an Ethernet connection.

Message Types

The control system sends the following command messages:

SET	Sent from the control system to the Shure device to change the value of a parameter. Used to set the parameter to a specific value. Once a SET command is sent, the Shure device sends back a REPORT string with the current resultant setting.
GET	Gets the current value of a parameter. Once a GET command is sent, the Shure device will send back a REPORT string with the current setting.
REPORT	Reports the current value for a parameter. The REPORT string is sent from the Shure device to the Control system in response to a SET or GET command. The REPORT string is also sent when the value of the parameter is changed on the Shure device.

Syntax

All messages sent and received are ASCII characters.

- Each message begins with a "<" followed by a space.
- Each message ends with a space followed by an ">"
- Each message is terminated by a carriage return and line feed (CRLF). The control system may need to enter the hex value, equivalent to 0x0D0A. Please see the control system user guide for information on entering carriage returns.
- If the message is a box parameter, there should be no channel number in the string.

Example Messages

Example Messages for Channel Parameters

- <GET 1 FREQUENCY >/0d/0a
- <REPORT 1 FREQUENCY 578000 >/0d/0a

Example Messages for Box Parameters

- <SET DEVICE_NAME Shure >/0d/0a
- <REPORT DEVICE_NAME Shure >/0d/0a

Command Response Table

	COMMAND	RESPONSE
View Transmitter Name	GET DEVICE_NAME	REPORT DEVICE_NAME vvvvvvvv
Set Channel Name	SET x CHAN NAME vvvvvvvv	REPORT x CHAN_NAME vvvvvvvv
Get Channel Name	GET x CHAN NAME	REPORT CHAN_NAME vvvvvvvv
Set Audio Level	SET x AUDIO_IN_LVL vvvv	REPORT x AUDIO_IN_LVL vvvv
View Audio Level	GET x AUDIO_IN_LVL	REPORT x AUDIO_IN_LVL vvvv
Set Transmitter Group & Channel	SET x GROUP_CHAN gg,cc	REPORT x FREQUENCY vvvvvvvv REPORT x GROUP_CHAN gg,ccvv
View Transmitter Group & Channel	GET x GROUP_CHAN	REPORT x GROUP_CHAN gg,cc
Set Transmitter Frequency	SET x FREQUENCY vvvvvvvv	REPORT x FREQUENCY vvvvvvvv REPORT x GROUP_CHAN --,--vv
View Transmitter Frequency	GET x FREQUENCY	REPORT x FREQUENCY vvvvvvvvvv
Set RF Tx Level	SET x RF_TX_LVL vvvvv	REPORT x RF_TX_LVL vvvvv
View RF Tx Level	GET x RF_TX_LVL	REPORT x RF_TX_LVL vvvvv
Set RF Mute	SET x RF_MUTE vvvv 1 = mute, 0 = unmute	REPORT x RF_MUTE vvvv 1 = mute, 0 = unmute
View RF Mute	GET x RF_MUTE 1 = mute, 0 = unmute	REPORT x RF_MUTE vvvv 1 = mute, 0 = unmute
Set Audio Tx Mode	SET x AUDIO_TX_MODE vvvv 1 = mono, 2 = point to point, 3 = stereo	REPORT x AUDIO_TX_MODE vvvv 1 = mono, 2 = point to point, 3 = stereo
View Audio Tx Mode	GET x AUDIO_TX_MODE	REPORT x AUDIO_TX_MODE vvvv 1 = mono, 2 = point to point, 3 = stereo
Set Audio Input Line Level	SET x AUDIO_IN_LINE_LVL vvvv 0 = off (Aux), 1 = on (Line)	REPORT x AUDIO_IN_LINE_LVL vvvv 0 = off (Aux), 1 = on (Line)
View Audio Input Line Level	GET x AUDIO_IN_LINE_LVL	REPORT x AUDIO_IN_LINE_LVL vvvv 0 = off (Aux), 1 = on (Line)
Set Metering Rate	SET x METER_RATE vvvvvvvv 0 = off, value in milliseconds	REPORT x METER_RATE vvvvvvvv 0 = off, value in milliseconds
View Metering Rate	GET x METER_RATE	REPORT x METER_RATE vvvvvvvv 0 = off, value in milliseconds
Audio Meter Level	REPORT x AUDIO_IN_LVL_L vvvvvvvv	REPORT x AUDIO_IN_LVL_L vvvvvvvv REPORT x AUDIO_IN_LVL_R vvvvvvvv

Spectrum Scan

Use this feature to scan the full RF spectrum for potential sources of interference and deploy open frequencies to all receivers on the network. A graphical representation of the scan data may be viewed on both the transmitter and receiver. This allows you to scroll through the graph to reveal details about the frequency and strength of the interfering signals.

Scanning and Deploying Frequencies

1. Turn off RF on all receivers.
2. **Collect the scan data.** From the bodypack receiver **MAIN MENU**, select **RADIO > FULL SCAN > RUN SCAN**
The receiver displays **SPECTRUM SCAN** and scans the full spectrum.
3. **Load the scan data from the bodypack receiver to the rack transmitter.** Align the IR windows and press **Sync > Spectrum > SyncScan**
The receiver displays the scan data as a graph and gives options for viewing and deploying.
4. **Search network for devices.** From the rack transmitter **Sync > Spectrum** menu, press **Deploy**.
The rack transmitter searches the network for all available transmitters.
5. **Choose a group.** Use the control wheel to select from the available groups.
The number of open frequencies for each group is displayed next to **Open Frequencies**.
6. **Deploy frequencies.** Press the flashing **enter** button to deploy frequencies to all channels.
The LEDs flash on all affected channels.

Viewing Spectrum Data

From the Bodypack Receiver

MAIN MENU > RADIO > FULL SCAN > SPECTRUM

- Adjust the cursor position using the **▼▲** keys.
- Press **enter** to zoom in at the cursor position. Press **exit** to zoom out.
- Press **scan** to display frequency and power of signal at the cursor position.

From the Rack Transmitter

Sync > Spectrum

- Adjust the cursor position by pressing **Cursor** and using the control wheel.
- Frequency and power of signal at the cursor position is displayed at the top of the screen.
- Press **Zoom** and use the control wheel to zoom in and out.

Updating Receiver Firmware

Use the following steps to update the firmware on a bodypack receiver.

1. Use the WWB update manager to download the receiver firmware to the rack transmitter.
2. On the transmitter, navigate to the **Util > More > FW Update** menu.
3. Align the receiver and transmitter IR ports and press **Download**. The download begins, which can take 50 seconds or longer.

Once the download is complete, the receiver automatically begins the firmware update, which overwrites the existing firmware.

CAUTION! Do **not** turn off the receiver until the update is complete.

SPECIFICATIONS

PSM1000

RF Carrier Range	470–952 MHz Note: varies by region
Compatible Frequencies	Per band: 39
Tuning Bandwidth	72–80 MHz Note: varies by region
Operating Range environment dependent	90 m (300 ft)
Audio Frequency Response	38 Hz–15 kHz
Signal-To-Noise Ratio A-Weighted	90 dB (typical)
Total Harmonic Distortion ref. ±34 kHz deviation @1 kHz	<0.5% (typical)
Companding	Patented Shure Audio Reference Companding
Spurious Rejection ref. 12dB SINAD	>80 dB (typical)
Frequency Stability	±2.5 ppm
MPX Pilot Tone	19 kHz (±0.3 kHz)
Modulation	FM*, MPX Stereo *ref. ±34 kHz deviation @1 kHz
Operating Temperature	-18°C to +57°C

P10R

Tri-Band RF Filtering	–3 dB at 30.5 MHz from the center frequency of each band
Active RF Gain Control	31 dB Adjusts RF sensitivity to provide more RF dynamic range
Active RF Sensitivity at 20 dB SINAD	2.2 μ V
Image Rejection	>90 dB
Adjacent Channel Rejection	>70 dB
Squelch Threshold	22 dB SINAD (±3 dB) default setting
Intermodulation Attenuation	>50 dB
Blocking	>80 dB
Audio Output Power 1kHz @ <1% distortion, peak power, @32Ω	100 mW (per output)
Minimum Load Impedance	9.5 Ω
High Boost	Selectable: +2 dB, +4 dB @ 10 kHz
Volume Limiter	Selectable: 3–9 Limits volume adjustment knob. Selected value analogous to volume knob increment.
Net Weight	196 g(6.9 oz.) (with batteries)
Dimensions	99 x 66 x 23 mm (3.9 in. x 2.6 in. x 0.9 in.) H x W x D
Battery Life	4–6 hours (continuous use) AA batteries

P10T

RF Output Power	Selectable: 10, 50, 100 mW (+20 dBm)
RF Output Impedance	50 Ω (typical)
Net Weight	4.7 Kg (10.4 lb.)
Dimensions	44 x 483 x 343 mm (1.7 x 19.0 x 13.5 in.), H x W x D
Power Requirement	Input: 100–240 V AC, 50/60 Hz, 0.5 Amax. (5.5, with outlet loaded) Output: 100–240 V AC, 50/60 Hz, 5 Amax., unswitched

Audio Input

Connector Type	Combination XLR and 6.35 mm (1/4") TRS
Polarity	XLR: Non-inverting (pin 2 positive with respect to pin 3) 6.35 mm (1/4") TRS: Tip positive with respect to ring
Configuration	Electronically balanced
Impedance	70.2 k Ω (actual)
Nominal Input Level	switchable: +4 dBu, –10 dBV
Maximum Input Level	+4 dBu: +29.2 dBu -10 dBV: +12.2 dBu
Pin Assignments	XLR: 1=ground, 2=hot, 3=cold 6.35 mm (1/4") TRS: Tip=hot, Ring=cold, Sleeve=ground
Phantom Power Protection	Up to 60 V DC

Audio Output

Connector Type	6.35 mm (1/4") TRS
Configuration	Electronically balanced
Impedance	Connected directly to inputs

ACCESSORIES AND PARTS

Furnished Accessories

P10R Antenna	
470–530 MHz	UA700
540–626 MHz	UA710
596–692 MHz	UA720
670–830 MHz	UA730
830–952 MHz	UA740
P10T Antenna	
470–542 MHz	UA820G10
554–626 MHz	UA820J8
596–668 MHz	UA820K1
626–698 MHz	UA820L8
670–742 MHz	UA820LCH
710–790 MHz	UA820P8
750–822 MHz	UA820Q2
944–952 MHz	UA820X
518–582 MHz	UA820H8
Front Mount Antenna Cable	95A9023
Zipper Bag	95A2313
Hardware Kit (Rack mounting Screws)	90AR8100
Bumper Kit	90B8977
AA Adapter	90XN1371

Optional Accessories

8-to-1 antenna combiner for better RF performance	PA821SWB
4-to-1 antenna combiner with power distribution to 4 transmitters (better RF performance and eliminates need for external power supply)	PA421SWB
Passive Directional Antenna	PA805SWB
Helical Antenna	HA-8089
Passive Omnidirectional Antenna	UA860SWB
Coaxial Cable, BNC-BNC, RG58C/U type, 50 Ohm, 2 ft length (0.6 m)	UA802
Coaxial Cable, BNC-BNC, RG58C/U type, 50 Ohm, 6 ft length (2 m)	UA806
Coaxial Cable, BNC-BNC, RG8X/U type, 50 Ohm, 25 ft length (7.5 m)	UA825
Coaxial Cable, BNC-BNC, RG8X/U type, 50 Ohm, 50 ft length (15 m)	UA850
Coaxial Cable, BNC-BNC, RG213/U Type, 50 Ohm, 100 ft length (30 m)	UA8100

BAND	RANGE	COUNTRY	Output Power (mW)
G10	470-542	US, IA	10/50/100
G10E		UK, EU, Peru	10/50
G11	479-542	HK	10
H8Z	518-582	NZ, Korea	10/50
J8	554-626	US, IA	10/50/100
J8E		EMEA	10/50
K10E	596-668	UK, EU, Australia	10/50
L8	626-698	US, IA, Aus	10/50/100
L8E		Emea	10/50
L9E	670-742	China	10/50
P8	710-790	EU	10/50
Q21	750-787	China	10/50
Q22E	750-822	EU	10/50
R26	794-806	Taiwan	6/10
R27	794-806	Thailand/EMEA	10/50
A24	"779-788 797-806"	Japan	6/10
X1	944-952	US	10/50/100

NOTE:

This Radio equipment is intended for use in musical professional entertainment and similar applications. This Radio apparatus may be capable of operating on some frequencies not authorized in your region. Please contact your national authority to obtain information on authorized frequencies and RF power levels for wireless microphone products.

CERTIFICATION

P10T, P10R

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Meets requirements of EMC standards EN 300 422 Parts 1 and 2 and EN 301 489 Parts 1 and 9.

P10T

Certified under FCC Parts 74. (**FCC ID:** DD4P10TA, DD4P10TB, DD4P10TC, DD4P10TD, DD4P10TJ). Certified by IC in Canada under RSS-123 and RSS-102. (**IC:** 616A-P10TA, 616A-P10TB, 616A-P10TC, 616A-P10TD). Meets essential requirements of European R&TTE Directive 99/5/EC, eligible to bear the CE mark. Meets UL 60065 and CSA C22.2 No. 60065



P10R

Approved under the Declaration of Conformity (DoC) provision of FCC Part 15. Certified in Canada by IC to RSS-123. (**IC:** 616A-P10RA, 616A-P10RB, 616A-P10RC, 616A-P10RD).

Operation of this device is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The CE Declaration of Conformity can be obtained from Shure Incorporated or any of its European representatives. For contact information please visit www.shure.com The CE Declaration of Conformity can be obtained from:

Authorized European representative:

Shure Europe GmbH

Headquarters Europe, Middle East & Africa

Department: EMEA Approval

Jakob-Dieffenbacher-Str. 12,

75031 Eppingen, Germany

Phone: +49-7262-92 49 0

Fax: +49-7262-92 49 11 4

Email: EMEAsupport@shure.de

LICENSING INFORMATION

Licensing: A ministerial license to operate this equipment may be required in certain areas. Consult your national authority for possible requirements. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate the equipment. Licensing of Shure wireless microphone equipment is the user's responsibility, and licensability depends on the user's classification and application, and on the selected frequency. Shure strongly urges the user to contact the appropriate telecommunications authority concerning proper licensing, and before choosing and ordering frequencies.

INFORMATION TO USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer.

Note: EMC conformance testing is based on the use of supplied and recommended cable types. The use of other cable types may degrade EMC performance.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



United States, Canada, Latin America, Caribbean:
Shure Incorporated
5800 West Touhy Avenue
Niles, IL 60714-4608 USA
Phone: 847-600-2000
Fax: 847-600-1212 (USA)
Fax: 847-600-6446
Email: info@shure.com

www.shure.com

©2011 Shure Incorporated

Europe, Middle East, Africa:
Shure Europe GmbH
Jakob-Dieffenbacher-Str. 12,
75031 Eppingen, Germany
Phone: 49-7262-92490
Fax: 49-7262-9249114
Email: info@shure.de

Asia, Pacific:
Shure Asia Limited
22/F, 625 King's Road
North Point, Island East
Hong Kong
Phone: 852-2893-4290
Fax: 852-2893-4055
Email: info@shure.com.hk